


NICEMAY

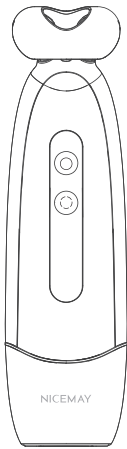


MR-2590

Lumilift Pro Multi-Action Facial Device

Please read the user manual carefully before use

► Parts Descriptions

- ① Transparent Protective Cover
- ② 3D Diamond-Cut Roller
- ③ Linear LED Light
- ④ LCD Screen
- ⑤ On/Off /Mode Button
- ⑥ Switch Button
- ⑦ Slanted Massage Head
- ⑧ Ring LED Light
- ⑨ Dust Cover
- ⑩ Type-C Charging Port
- ⑪ Type-C Charging Cable
- ⑫ Cleansing Cloth

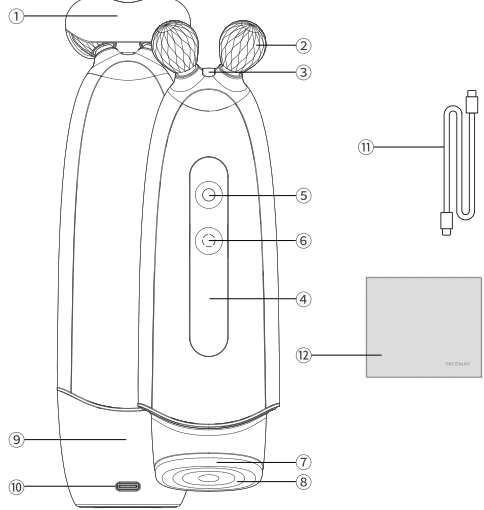

Note: This product has a built-in lithium battery and only supports Type-C cable (included) charging.

► Functions

MR-2590 Lumilift Pro Multi-Action Facial Device is an all-in-one beauty solution integrating nutrient infusion, photon therapy, firming, pore care, and deep contour lifting. Featuring 6 specialized modes with 5 intensity levels, it precisely targets different skin layers. Built with a 304 stainless steel head, IPX6 waterproof rating, and a responsive touch display, it delivers a safe, stable, and premium experience. From skin tightening to V-shape sculpting, achieve professional daily care in one device.

Booster Mode

Orange mixed light x Microcurrent x Gentle vibration
It introduces care ingredients deeply, enhances skin translucency, and reveals a hydrated glow.

MC Mode

Green light x Microcurrent x Continuous vibration
It activates collagen elasticity, enhances firmness, and strengthens facial three-dimensional contours.

DERMA-SHOT Mode

Red light x Microcurrent x Gentle vibration
It deeply firms facial muscle groups, makes lines more defined, and enhances structural support.

AIR-SHOT Mode

Blue light x Microcurrent x Short-wave vibration
It refines pores and smooths skin surface, improves roughness and dullness, and restores elastic texture.

LIFT Mode

Red light x Microcurrent
It penetrates directly into deep muscles, lifts upwards, and tightens the facial V-contour.

ANTI-A Mode

Red light x RF
It tightens while activating collagen renewal, strengthens repair and stabilizes skin foundation, making skin progressively lifted for a youthful radiance.

► Indications

No.	Item	Indication
1	On	Press and hold the "Power / Mode Button" for 1 second to turn on the device. It will emit a long beep and start working.
2	Working Mode	The screen displays the current mode, intensity level, usage time, and battery status.

		- Mode Selection: While the device is on, briefly press the "Power/Mode" button to switch modes. The device will emit a short beep to confirm the change. - Intensity Adjustment:While the device is on, briefly press the "Switch" button to adjust the intensity. The device will emit a short beep to confirm the change. Note: The device will automatically turn off after 3 minutes of inactivity.
3	Unloaded	The device will enter Unloaded Mode after 5 minutes of continuous use. Press the "Power / Mode Button" within 10 seconds to resume the current mode and level, or it will automatically shut down.
4	Shutdown	①Press and hold the "Power / Mode Button" for 1.5 seconds to turn off the device. It will emit two quick beeps and shut down. ②The device automatically shuts down after 3 minutes of inactivity.
5	Low Battery Indicator	Low battery: The screen's power level shows a red bar; Low Battery Shutdown: The screen displays a red low battery indicator, emitting 3 beeps before automatically shutting down.
6	Charging Indicator	The screen displays a charging icon. A red indicator shows low battery status, and a green progress bar indicates the battery level. Recommended charging time is ≤ 4 hours.

7	Charging Completion Indicator	The charging progress bar turns solid green.
---	-------------------------------	--

► How to Use

The following is a demonstration process (picture and text as below), you can choose any mode and level to use according to personalized demands.

AIR-SHOT Mode



- ① Keep your skin dry, wipe off the massage heads and make sure there is no residue of skin care products.



- ② Gently exfoliate your face by sweeping the massage heads from the inside out.

BOOSTER Mode:



- ① Apply appropriate essence or cream to the face and neck.



- ② Hold the device and move the massage head in circular motions along the facial contours from the inside out, promoting the absorption of the skincare products and helping the skin brighten.

MC Mode:



- ① Apply appropriate eye cream and face cream to the eye and face.



- ② Hold the device and use the massage head to lift the skin on the face from the inside out and upward, especially around the eyes, mouth and nasolabial folds, to enhance the plumpness of the skin.

NICEMAY

Product name: Lumilift Pro Multi-Action Facial Device
Model No.: MR-2590
Dimensions: 52.3×188.3×46.9 mm (L x W x H)
Place of origin: Shenzhen, China



DERMA-SHOT Mode:



- ① Apply appropriate cream to the face and neck.



- ② Hold the device and use the massage head to lift along the cheekbones and jawline from the inside out to sculpt and tighten the skin.

LIFT Mode & ANTI-A Mode:



- ① Apply an appropriate amount of gel onto the face and neck.



- ② Hold the device with the 3D rollers against the skin. Glide upwards along the facial and neck contours at a steady speed to sculpt defined contours.

【Usage Tips】

1. For BOOSTER, MC, DERMA-SHOT, LIFT, and ANTI-A modes, it is recommended to use the device 1-3 times daily for 5-10 minutes per session.
2. AIR-SHOT Mode is recommended for use 2-3 times weekly for 5 minutes per session.
3. The device enters Unloaded Mode after 5 minutes of continuous use. Press the "Power / Mode Button" within 10 seconds to resume the current mode and level, or it will automatically shut down.
4. Ensure the massage head does not come into direct contact with metal jewelry or conductive accessories during use.
5. For initial use, it is recommended to start from the lowest level and gradually increase the intensity.
6. Glide the massage head/3D rollers at a steady speed. Do not keep the device stationary on one spot for an extended period.
7. Wipe the massage head/ 3D rollers and close the dust cover after use. Please keep the device clean.

► Cautions

Contraindication

1. Children are prohibited from using.
2. Avoid using on the eyelids, lips, ears, breasts, thyroid area or genitals.
3. People with implantable electronic medical devices are prohibited from using the device.
4. Do not use if you have skin swelling, recent surgery, sunburn, or other skin conditions.
5. People with skin inflammation (such as sores, psoriasis, eczema, rashes, recurrent herpes simplex, scarring, or open wounds), electromagnetic sensitivity, hemophilia, bleeding disorders, or atopic dermatitis, as well as pregnant or breastfeeding women, are prohibited from using the device.
6. Do not use the device if you have cancer, suspected cancer, or precancerous lesions, especially skin cancer or precancerous nevus.
7. Do not use for a long time at same area.
8. Do not use the device if you have undergone skin surgery or suffered severe sunburn within the past month.
9. Please consult the Doctor if you have medical aesthetic treatments before use the device .
10. People with metal dental implants are not recommended to use the device.
11. Do not use the massage bead, LED light on eyeball directly.
12. Watches, glasses, false eyelashes or other metallic must be removed before operation.

⊘ Do not disregard the device when it is working ON	⊘ Please do not use the device when it is charging ON
⊘ Do not disassemble the product by yourself	⊘ Please check the device before use if it has been subjected to strong impact or dropped

⊘ Do not use it if the device or Type-C cable is broken ON	⊘ Please keep it away from high temperature or water
--	---

Cleansing & Maintenance

Wipe the device with a soft, dry cloth immediately after use.
Do not immerse the device into water.

Storage

Keep it in a dry and dust-free place.
Keep it away from corrosive liquid.
Keep it out of the reach of children.

► FAQ

Faults	Analyses	Solutions
Fail to turn on or the lights doesn' t work.	① Out of power ② Lights broken or the program are damaged.	① Charge the device for 4h and try again. ② Please contact after-sale service team for help if it still doesn' t work.
Fail to work after charging.	① USB cable/ adapter does not connect well. ② The device is not charged sufficiently. ③ The battery has reached the end of its life. (In normal condition the battery life is 3 years)	① To check and ensure a good contact between the device and the charger. (Indicator light flashes while charging) ② Please contact after-sales service team if it still doesn' t work.
Tip: Please fully charge the device if it has not been used for more than 6 months.		