

NICEMAY



QM-2227

2 IN 1 Eyebrow Trimmer & Heated Eyelash Curler

Please read the user manual carefully before use

► Contents

 

Contents	1
Specifications	2
Parts Descriptions	2, 3
Functions	3
Indications	3, 4
How to Use	4, 5, 6
Safety Precautions	7, 8
FAQ	8

► Specifications

No.	Item	Unit	Spec.
1	Rated Working Voltage	V	3.7V
2	Working Current	mA	Heated Eyelash mode: <350mA Eyebrow Trimmer mode: <200mA
3	Rated Power	W	<2W
4	Battery Capacity	/	300mAh
5	Smart timer	Min	10Min
6	Stand-by time	Min	Low temp for Eyelash curler ≥8T High temp for Eyelash curler ≥6T Eyebrow Trimmer mode ≥15T
7	Charging Current	mA	≤300mA
8	Charging Time	H	<3H
9	Temperature	°C	Low: 60±5°C High: 80±5°C

► Parts Descriptions

- ① Protect Cover
- ② Double-layer detachable electric blade
- ③ Detachable clasp
- ④ Heated Eyelash Curler Comb
- ⑤ 10° swinging blade head marking
- ⑥ On/Off button
- ⑦ Type-C Charging port
- ⑧ USB charging cable

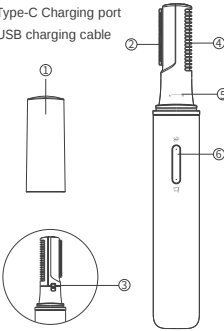

Note: This product is equipped with a built-in lithium battery and only supports charging via a USB cable (Type-C interface).

► Functions

QM-2227 2 IN 1 Eyebrow Trimmer & Heated Eyelash Curler is a professional instrument for electric eyebrow trimmer and eyelash curler. R-shaped arc blade is for painless and safety hair trimming without residual around eyes and detachable blade head is for easy clean. The heated eyelash head equips with two gear temperature design which can curl all types eyelashes for long-lasting. 10 minutes smart timer. 10° flexible angled head is suitable for more areas.

► Indications

No.	Item	Indication
1	Power on	Low temp for Eyelash curler: Heat up to 60±5°C, suitable for soft and fine eyelashes, White indicator light on. High temp for Eyelash curler: Heat up to 80±5°C, suitable for hard, thick eyelashes, Yellow indicator light on. Note: When the electric eyelash brush is preheating, the indicator light flashes, and when the set temperature reaches, the beep drops twice. The indicator light is always on and automatically turns off for 10 minutes. Eyebrow Trimmer mode: Press the On/Off button twice after startup, and the white indicator light of the eyebrow trimmer mode is always on.

2	Low Power	Battery > 10%: White lights are always on for normal use. Battery < 10%: Indicator flashes white 3 times, stays on for 10 minutes. Battery < 5%: Indicator rapidly flashes white 3 times, product auto shuts down.
3	Out of Power	White Indicator light flashes three times then shut down automatically.
4	Charging	Steady white indicator; turns off after 5 mins of full charge for power protection.
5	Power-off indicator	Short press power button, accompanied by two beeps, product powers off.

► How to Use

Below is normal demonstration process for reference.



1. Open the protective cover and Rotate the blade head to the appropriate angle.



2. Long press On/Off button to Heated Eyelash Curler mode with Low temp (The White light flashing), or short press to Heated Eyelash Curler mode with High temp (The yellow light flashing.)



- After the heating is completed (the lights are always on), Press to the root and curl upward.
- Trying a few times until you want.

Warm tips: Heated eyelash curler mode is not suitable for naked eyelashes, please apply mascara after use, lasting design.



3. After starting, press On/Off button and select electric eyebrow trimmer mode:



Electric Shaving and Trimming: Briefly press the power switch key to turn on, and press again to turn off after using. Manual Precision Trimming: Use directly.



Eyebrow trimming: Trim the eyebrows above and below the eyebrow shape and any stray short hairs.



Lip and cheek hair trimming: Shave off any fine hairs along the lip and facial contours.



Finger hair trimming: Shave off the short hairs at the base by going against the direction of hair growth.



For small areas of body hair in other parts: Shave against the direction of hair growth.



4. Long press to shut down after using.

Warm tips: Product with smart timer: Each mode is off for 10 minutes without operation state.

Product with memory function: It will restores the last mode you used.

► Safety Precautions

Warning

- Children are prohibited from using.
- Do not use if you have had skin scabby or acne.
- Please keep device dry and clean while using.
- Please avoid overuse.
- Do not disassemble the blade when using.

Cleaning

Please take down the blade head, and then use the cleaning brush to clean inside after use.

The blade can be removed and washed, and reinstalled back to the host machine after drying.

Do not immerse the device into water.

Storage

Please keep it away from high temperatures. Please keep it away from corrosive liquid.

Please keep it in the place without corrosive chemicals around.

Please keep it out of the reach of children.

► FAQ

Faults	Analyses	Solutions
The blade is not working after device is ON	1. The blade doesn't fit well. 2. There are foreign stuck in the blade.	1. Please reassemble the blade. 2. Please clean the blade. 3. Please contact after-sale service for help if it still doesn't work.
Unable to boot	1. The blade doesn't fit well. 2. Out of power.	1. Please reassemble the blade. 2. Please use after 3 hours of charging. 3. Please contact after-sale service for help if it still doesn't work.

NICEMAY

Shenzhen Hongwang Nicemay Electric Co.,Ltd.
Product name: 2 IN 1 Eyebrow Trimmer & Heated Eyelash Curler
Model No.: QM-2227
Dimensions: 154×22×18 mm (L x W x H)
Standard: GB 4706.1-2005
Manufacturer: SHENZHEN HONGWANG NICEMAY ELECTRIC CO., LTD.
Address: No.3, Lane 3, Jiazitang 1st Industrial Zone, Fenghuang Road, Guangming District, Shenzhen, China
Tel: +86-755-26552799
Post code: 518132
Place of origin: Shenzhen, China

